 


USER MANUAL

OTTAN

S W E D E N

NORD

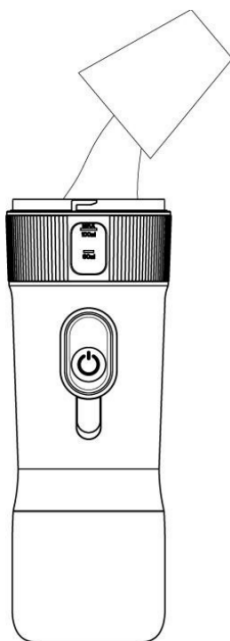

PORTABLE • SELF-HEATING • ESPRESSO

Great coffee, wherever the day begins.

MEET NORD

Coffee without the kitchen.


OTTAN NORD is a portable, battery-powered espresso maker designed for everyday life, travel and the outdoors. Use ground coffee, Nespresso®-compatible capsules or Dolce Gusto®-compatible capsules in one compact system.

92°C	Target heating temperature
100 ml	Water tank capacity
3 systems	Ground • Nespresso® • Dolce Gusto®

TECHNICAL SPECIFICATIONS

Product	OTTAN NORD
Input	5V ~ 2A, USB-C
Battery	2,600 mAh
Heating power	100 W
Extraction power	5 W

 Components

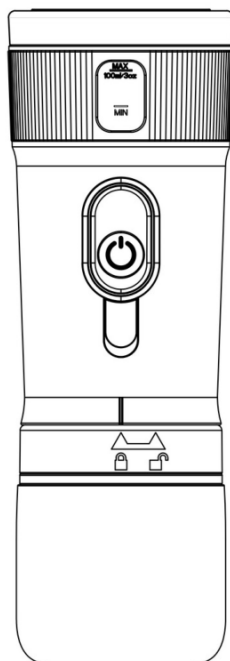

- | | |
|-----------------------|------------------------|
| 1 Lid | 9 Ground coffee basket |
| 2 Water tank | 10 Ground coffee lid |
| 3 Main body | 11 Nespresso® holder |
| 4 Control button | 12 Nespresso® lid |
| 5 USB-C charging port | 13 Nespresso® adapter |
| 6 Adapter assembly | 14 Dolce Gusto® holder |
| 7 Coffee cup | 15 Dolce Gusto® lid |
| 8 Coffee scoop | |

Safety first

Read these instructions before using NORD. Use the product only for coffee extraction and as described in this manual.

- Never immerse the main unit, charging cable or charging port in water or other liquids.
- Always add water before starting the heating cycle. Never heat the unit while empty.
- Make sure the adapter assembly is fully locked to the main unit before extraction.
- Do not open the lid immediately after heating or extraction. Hot water and steam can cause burns.
- Allow capsules and the adapter assembly to cool before removal.
- Use on a stable, level surface and keep away from open flames, cooktops and other heat sources.
- Keep the product, accessories and packaging away from young children. Children should only use it under close adult supervision.
- Disconnect charging power when the product is not being charged, before cleaning and if the product is damaged or behaving unexpectedly.

FIRST CLEAN


Before your first coffee, run clean hot water (above 90°C) through the system several times without coffee or a capsule.

Charge & choose your coffee

CHARGING

Connect a 5V $\Rightarrow$ 2A power source to the USB-C charging port. During charging, the red indicator flashes slowly. When fully charged, the white indicator remains on. A fast red flash indicates low battery.

GROUND COFFEE

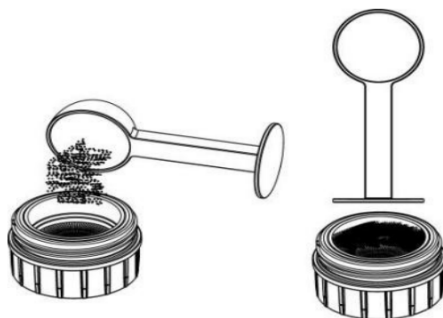

Fill the ground coffee basket using the scoop. Level and lightly press the coffee, then close the basket lid.

NESPRESSO®-COMPATIBLE CAPSULE



Place the capsule in the adapter, insert it into the holder and close the capsule lid.

DOLCE GUSTO®-COMPATIBLE CAPSULE

Place the capsule in the Dolce Gusto® holder and close the capsule lid securely.

Lock. Fill. Extract.



1. Attach the filled adapter assembly to the bottom of the main unit. Align the unlock mark, then turn clockwise until it reaches the lock position. Place the unit on the coffee cup.

HOT WATER MODE

Add 50–100 ml of hot water above 90°C and tighten the lid. For espresso, use the lower fill mark. Double-click the control button to start extraction. The pump stops automatically when extraction is complete.

SELF-HEATING MODE

Add 50–100 ml of room-temperature water and tighten the lid. Press and hold the control button for 3 seconds. NORD heats the water to the target temperature, then starts extraction automatically.

STOP ANYTIME


Press the control button once to stop the current cycle.

HOW IT WORKS

01

Add water.


Fill with fresh, cold water
(up to 100 ml).

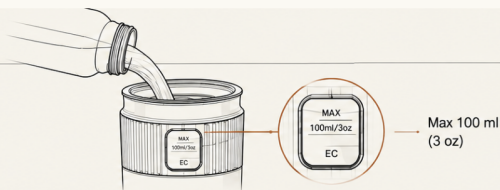

02

Choose your coffee.

Use Nespresso® capsules, Dolce Gusto® capsules or ground coffee.

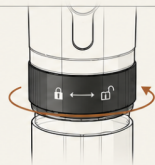

03


Press and brew.

Press the button and enjoy a rich espresso – anywhere.



Clean after every coffee

A little care keeps NORD ready for the next morning.

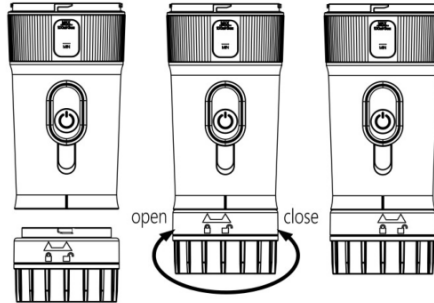

- Let the product cool before opening or removing the capsule or coffee basket.
- Rinse the removable adapter parts and accessories with clean water after use.
- Wipe the main unit with a soft damp cloth. Do not rinse or immerse the main unit.
- Do not use abrasive pads, hard tools or aggressive cleaning chemicals.
- Keep the exterior and USB-C charging port dry before storage or charging.

DESCALING

Mineral build-up can affect heating and flow. Descale periodically based on your water hardness and frequency of use, following the cleaning method recommended by OTTAN for NORD.

Troubleshooting

What you see	Likely cause	What to do
No operation	Battery is low	Fully charge NORD and try again.
Fast flashing light	Battery is low	Charge before use.
No extraction	No water / flow issue	Add water and confirm the adapter is installed correctly.
No heat	Heating or battery fault	Stop using the product and contact support.
Indicator not working	Indicator or product fault	Stop use if operation is abnormal and contact support.

NEED HELP?

Keep your proof of purchase and product details available when contacting your retailer or OTTAN support.

OTTAN
SWEDEN
NORD

THE MOMENT THE DAY BEGINS